

ORMA MODULAR FORMWORK

Vertical formwork: strong, versatile and suitable to be used in many applications



IMPORTANT:

Any safety provisions as directed by the appropriate governing agencies must be observed when using our products.

The pictures in this document are snapshots of situations at different stages of assembly, and therefore are not complete images. For the purpose of safety, they should not be deemed as definitive.

All of the indications regarding safety and operations contained in this document, and the data on stress and loads should be respected. ULMA Construcción's Technical Department must be consulted anytime that field changes alter our equipment installation drawings.


The loads featured in this document, related to the basic elements of the product, are approximate.

Our equipment is designed to work with accessories and elements made by our company only. Combining such equipment with other systems is not only dangerous but also voids any or all our warrantees.

The company reserves the right to introduce any modifications deemed necessary for the technical development of the product.

All rights reserved.

Neither all nor part of this document may be reproduced or transmitted in any way by any electronic or mechanical procedure, including photocopy, magnetic recording or any other form of information storage or retrieval system without the written permission of **ULMA Construcción**.

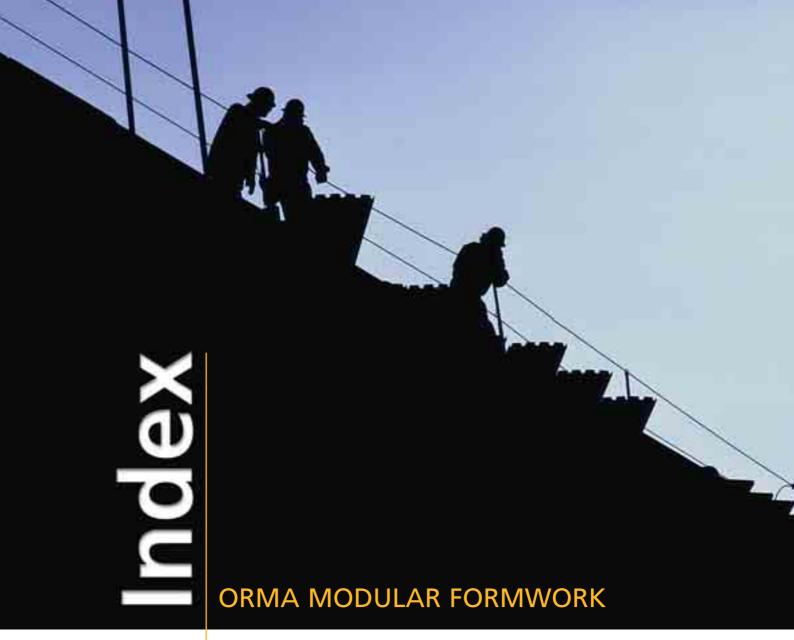

- 4 Product description
- **7** Basic system components
- 28 Basic assembly process
- 33 Technical solutions
- 60 Handling and repair
- 62 Components and accessories
- 71 Our products
- 72 ULMA Construcción addresses

Product description

Safety and special features

The **ORMA Modular Formwork system** provides solutions for the execution of any type of vertical structure, no matter how risky it may seem: **walls, columns, abutments, foundations...** It is suitable for framing any geometrical shape.

The high performance of this system is guaranteed for any type of construction job, whether constructing buildings or other civil engineering projects.

The system is comprised mainly of panels, joined by clamps, available in gangs that make up the formwork. ORMA has elements or accessories that **efficiently** and safely provide solutions for all types of geometries.





Primary characteristics:

- System certified by the German organization **GSV*** according to established guidelines and requirements.
- System designed to support high concrete pressures.
- **Wide range** of panels, the largest being 3.3x2.4m (7.92m²).
- **Robust panel** formed by a metal frame with reinforced corners.
- **Highly versatile system** due to **lateral holes** that allow quickly framing typical solutions, such as bulkheads, corners and columns.
- The plywood shuttering face provides **excellent surface finishes.**
- Panels are joined by **clamps** with the strike of a hammer to form large gangs, which can then be lifted.
- The wide range of **Column Panels** provides solutions for columns of any dimension and height.
- Safety elements are easily fastened to panels, thus always guaranteeing safe system use.



*GSV: World renowned international organization that is constituted of major formwork manufacturers. GSV establishes strict design, manufacturing and control

requirements, thus guaranteeing product quality.

More information: www.gsv-betonschalungen.de


















Possibilities of the ORMA system: Features and Solutions

1 Climbing systems	8 90° wall intersections
2 One face formwork support	9 Fillers
3 Columns	10 ORMA-BRIO Bracket
4 Pilasters	11 Walkway bracket
5 90° corners	12 ORMA Platform
6 Hinged corners	Post bracket
7 Bulkheads	

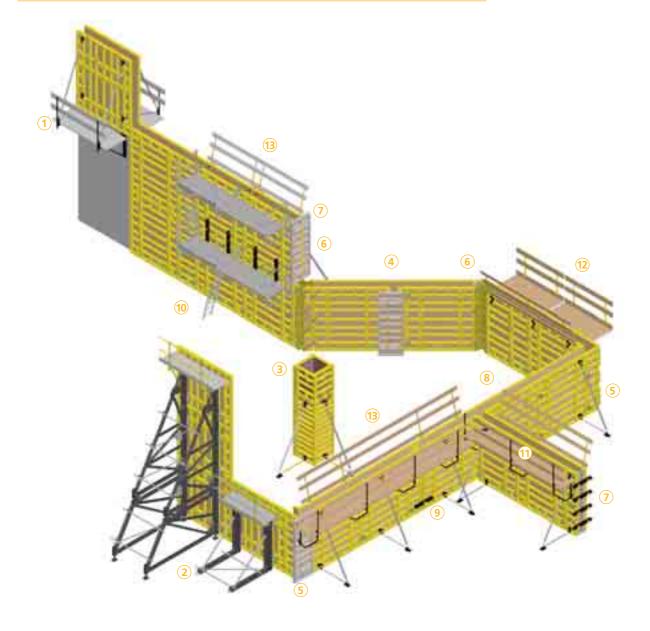

Basic system components

Versatile and capable of adapting to all ULMA Construcción vertical systems


ULMA Construcción is committed to making versatile products with the objective of **maximizing product performance and minimizing costs of construction**. Accordingly, the ORMA Modular Formwork system is comprised of a series of components that, for the most part, can be used in conjunction with different ULMA Construcción vertical formwork systems.





Panels:

A perfect custom concrete finishing

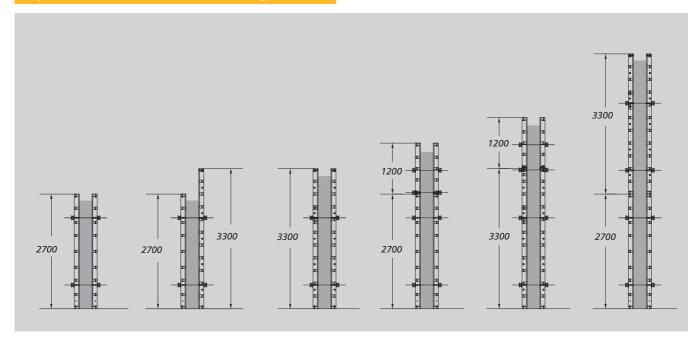


GSV certification:

- · Maximum load pressure:
- 3.3m range: 80 kN/m²
- 2.7m range: 74 kN/m²
- Maximum deflections:
- 60 kN/m² (line 7, tab.3 DIN 18202)
- 80 kN/m² (line 6, tab.3 DIN 18202)


Pouring concrete:

- For pouring height ≤ 3.3m, only 2 ties are necessary.
- For pouring height > 3.3m, 3 ties are necessary.




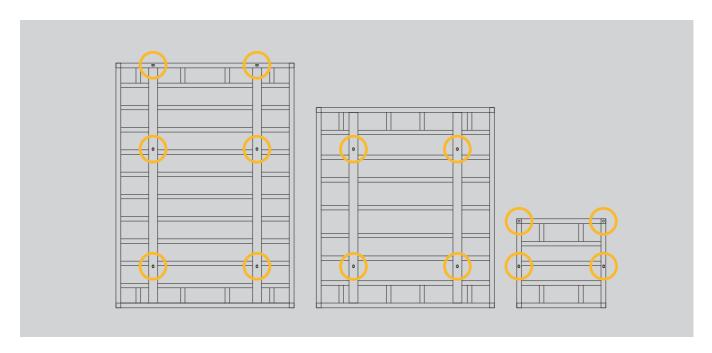

- Large panel 3.3x2.4m (7.92m²) with 3 tying points in height.
- ▶ Big Panel 2.7x2.4m (6.48m²) with 2 tying points in height.
- Three **ranges of panel heights:** 3.3m 2.7m and 1.2m panels. These are completely compatible and can be assembled in vertical or horizontal position.

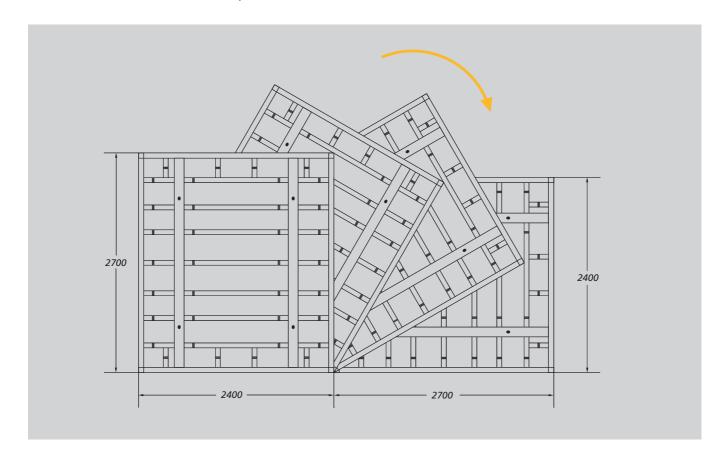


The 3.3 and 2.7 Panel ranges can be assembled face to face and are compatible.

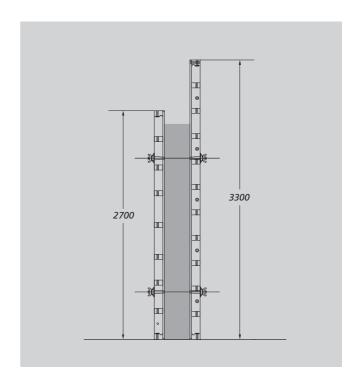

Width range:

0.3 / 0.45 / 0.6 / 0.75 / 0.9 / 1.2 and 2.4m. Gangs can be laid out every 15cm by combining different panels.

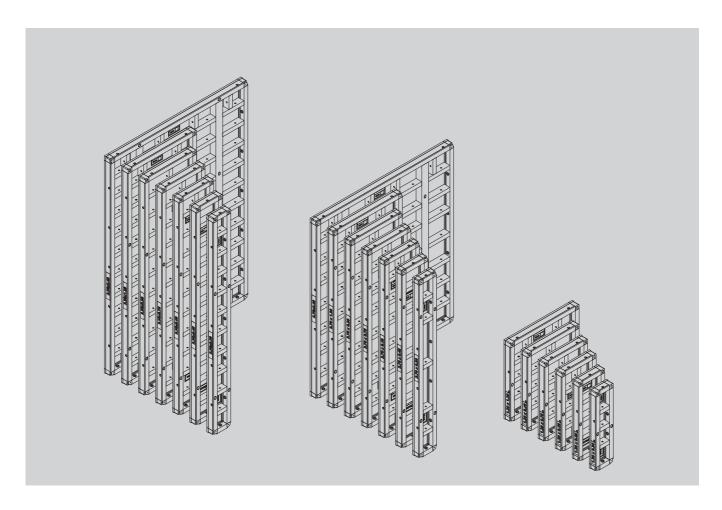










- The metal frame is formed by a perimeter profile and reinforced corners capable of absorbing impacts and avoiding breakage due to incorrect use. Besides, these corners reinforcement include a hollow to introduce the crow bar.
- The panels have lateral holes that are reinforced on the profiles for providing bulkhead, corner and pilaster solutions, thus making the system highly versatile.



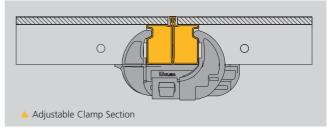

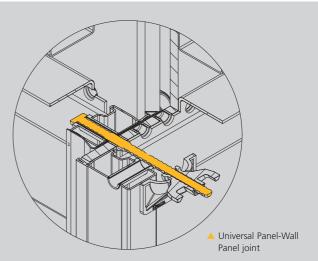

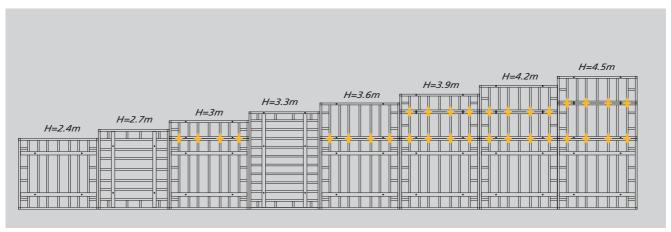


ightharpoonup ORMA Panel's height range (from 2.4m to 4.5m)



The shuttering face of the 18mm **thick plywood** is riveted to the metal structure. Its edges and tie holes are protected against impact and moisture.



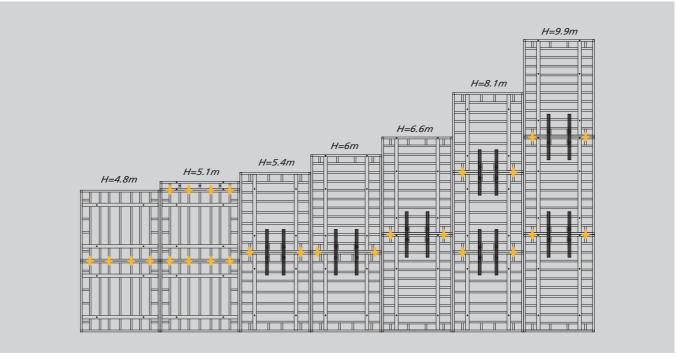


▲ ORMA Panel's height range (from 4.8m to 9.9m)




Universal Panel

Multiple applications

The Universal Panel has U-shaped ribs with multipunched holes. Thus, these holes permit quickly framing corners, bulkheads and pilasters combining Universal and wall panels.

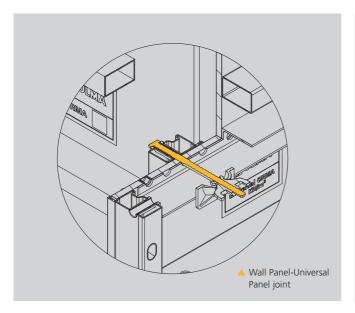

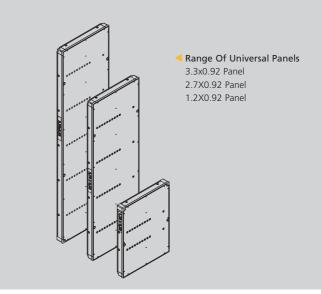

Universal Panels can also be used as wall panels, so they have tie holes in the perimeter profile where Tie Rods can be inserted.



Clamps:

Fast and simple connection

Adjustable Clamp

Guaranteed strong joints and fast assembly

This is the main component used to join panels. With one single strike of the hammer, it can be used to make gangs that are assured to be tight joint, no any concrete leak.

· It has three basic functions:

- Joining
- Aligning
- Stiffening




▲ Ease of installation



▲ The tightness of the joint is assured



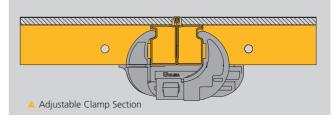



▲ This clamp can cover fillers between panels up to 10cm wide




Fixed Clamp

Guaranteed tight joint

Panel joint component that cannot be used in conjuction with compensation. Just as with the Adjustable Clamp, all panel joints can be formed with this clamp.





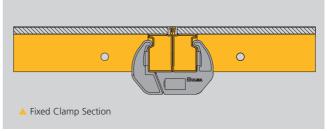



lack The clamp joins panels in the edge



Waler:

Auxiliary part used to lift gangs and align compensation.

Two Waler Hooks are used to fix these elements to the panel.








▲ Waler Hook detail



▲ These pieces provide rigidity and stability in hoisting

▲ Anchor of the Waler Hook in ORMA's Panel

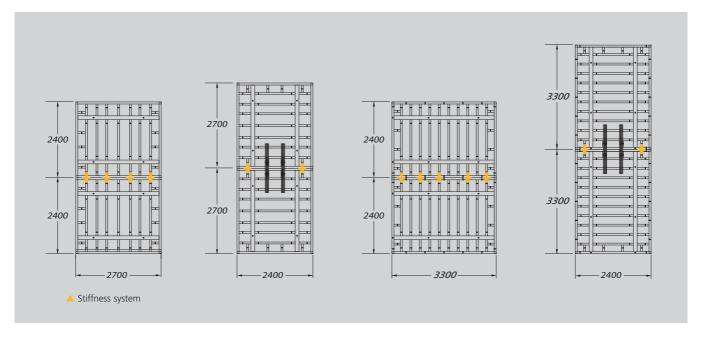









▲ Walers in fillers

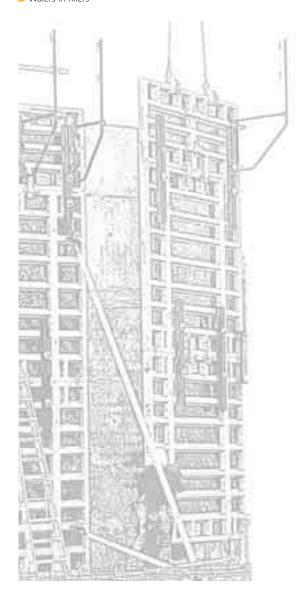

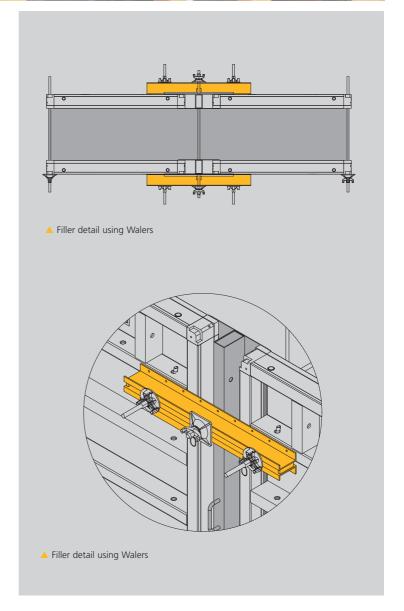

Tying System:

This tying system is strong enough to support the high pressures exerted when concrete is poured

This is an assembly formed by Tie Rods and nuts specially designed to support high concrete pressures.

The ORMA system joins panels face-to-face using


The ORMA system joins panels face-to-face using Tie Rods and their respective tying elements.

To permit recovering material and reusing it, the rods are protected by plastic tubes that are inserted between face-to-face panels. In addition, they maintain the proper spacing and thickness of the wall to be executed.

Ø15mm and Ø20mm Tie Rods can be used with the ORMA system.

NAME 15mm Tie		NAME 20mm Tie
Spacer Tube 22/25	(Tangan)	Spacer Tube 32/36
Cone 22		Cone 32
Tie Rod 15		Tie Rod 20
Plate Washer Nut 15		Plate Washer Nut 20



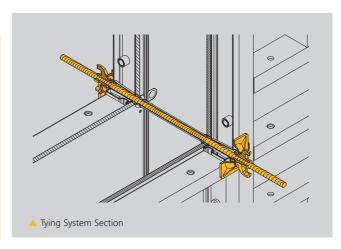





▲ The nut design allows the entering of Tie Rod



Lifting:

Completely safe and resistant gang lifting


The ORMA Lifting Hook is an auxiliary component used in conjunction with a crane to lift single panels or gangs of panels.


With maximum load capacity of **1500kg** per unit, it is recommended to use two lifting hooks when lifting.

The following certifications guarantee that it is a safe component:

- The "CE" mark corresponds to European Directive 98/37/CE on machinery, and the maintenance control plate is provided to verify when maintenance work has been performed.
- The "GS" seal means that the system has been inspected by the Construction Committee of the "Office for Testing and Certifications" of BG-PRÜFZERT in Germany.





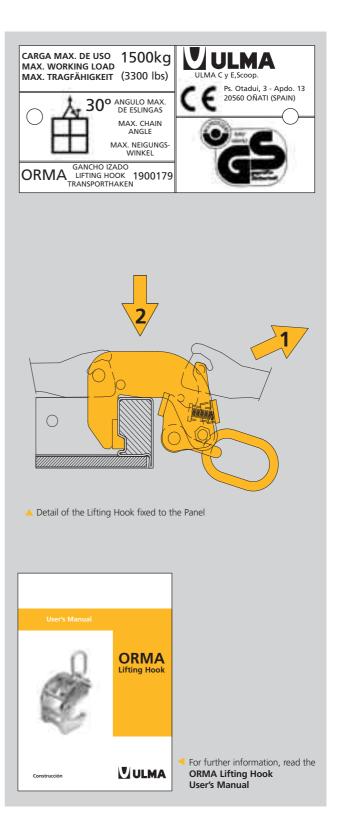





▲ Lifting gangs including working platform in different levels





▲ ORMA Lifting Hook



Safety Elements:

Everyday safety

ULMA Construcción strives daily to assure complete, personal and collective protection for workers and third parties alike. The company provides the same care for its products as it does for its professionals, always seeking to obtain the pertinent certifications from accredited companies. All of its systems incorporate safety elements to protect personnel when assembling and using the system.

Work Platforms:

Stable and safe working area

Work at high elevations, such as those reached when pouring concrete or installing different elements on top of the formwork, should be carried out from **safe and stable** work platforms that prevent workers from falling.


The ORMA system provides different solutions to build working platforms:

Walkway bracket:


Safe support at high elevations

This accessory, support for the working platform, is fixed by passing the rods through the tie holes on the horizontal ribs or by tying them to the vertical tubes. The abutment is supported by the lower ribs.

This component can also be used with other ULMA Construcción vertical formwork systems.

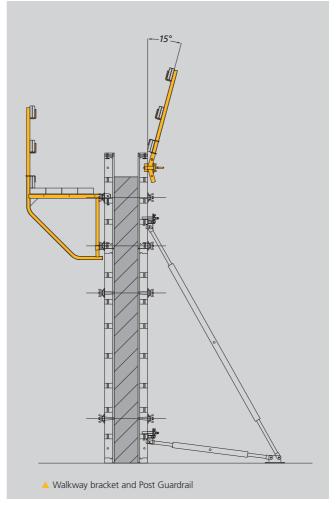







▲ Detail: fixed to a horizontal rib



▲ Safety pin in bracket

It includes elements that allow precisely **installing handrails and toeboards** using planks.

The work platform is created by nailing various planks to the top of the plastic block on the walkway bracket.











The same bracket system can be assembled on the opposite panel, or a safety handrail, using the **Post Bracket and the Safety Handrail Post.**

The lateral sides of the platform can be covered using **Clamps Safety Handrail.**











ORMA Platform 2.4x1.2

The integral and fast solution

This working platform, which **includes all the necessary elements,** is always placed on the upper part of the formwork panels.




To install the platform, just unfold the handrail and lift it with a crane using the lifting rings. The final step of this simple assembly is to use the hooks to place the platform on top of the last panel's profile.

Transporting and storing the platform is simple since the handrails fold up on top of it, which makes it easier to stack.





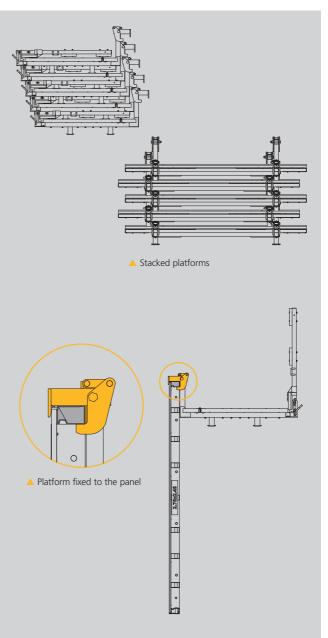






ORMA-BRIO Bracket

Complete safety for high elevation jobs

The ORMA-BRIO bracket has a welded clamp which is used to fix the bracket to the formwork on any point on the exterior profile along the panel joint, on the top of the formwork or even in intermediate positions



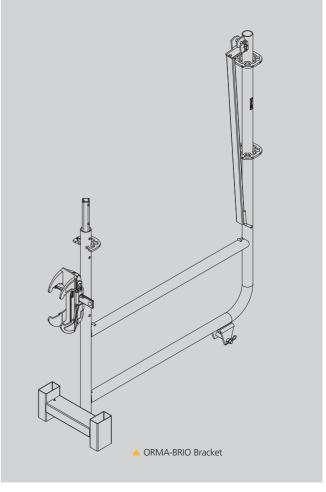






This bracket uses **BRIO Multidirectional Scaffolding** standard elements, thus guaranteeing the versatility and safety provided by this certified scaffolding.



The metal platforms, either with or without trapdoor, are installed on top of the **Bracket** in the same way as the elements for the **handrail** and **toe board**.

The trapdoor platform includes a ladder to access to different working levels.

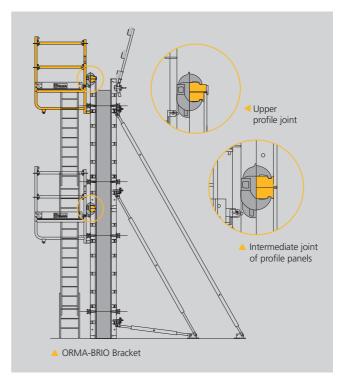













Stabilizing System:


Constant balance

Elements used during panel assembly to stabilize them against wind loads and to plumb the formwork once it is assembled. The system uses adjustable jacks to support both tensile and compression stresses.



It is comprised of the following:

- **Push-pull prop:** a tube over which two jacks slide to acquire the proper length. More than one type of push-pull prop may be used to stabilize the formwork based on the height of the formwork. Push-pull props range in length from 1.1 to 10m.
- **Head 60:** an element that joins the panel and the Push-pull prop. It can be placed over both the vertical and horizontal ribs.
- **Push-pull prop shoe:** component used to anchor push-pull props to the foundation through the holes includes on it. It's recommended to use HSA M20X125 Hilti anchors.

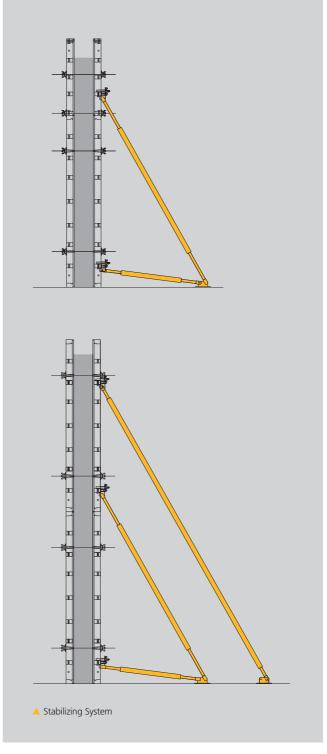














Basic assembly process


The work process described below may vary depending on the geometry required. Work at high elevations should be executed safely from working platforms or using reglamentary auxiliary equipment that guarantees the operator's safety.






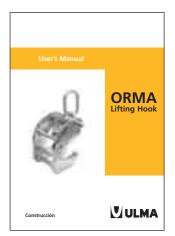


For further information, read the ORMA Modular Formwork User's Manual and the ORMA Lifting Hook User's Manual

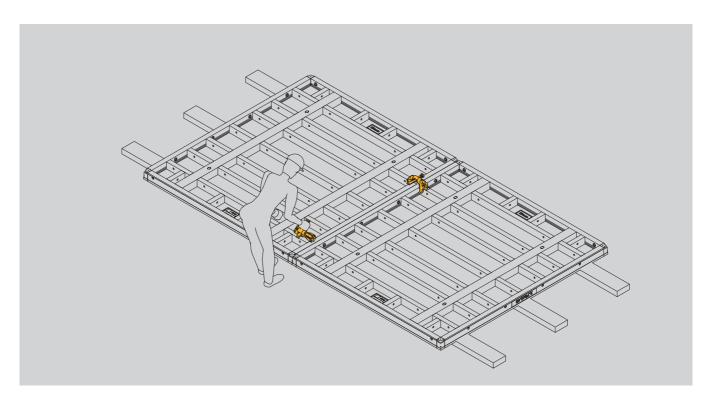

- △ · Place the formwork Panels on top of the wood sills with the metal frame facing upward.
 - · Join the panels with two Adjustable Clamps on the vertical joint.

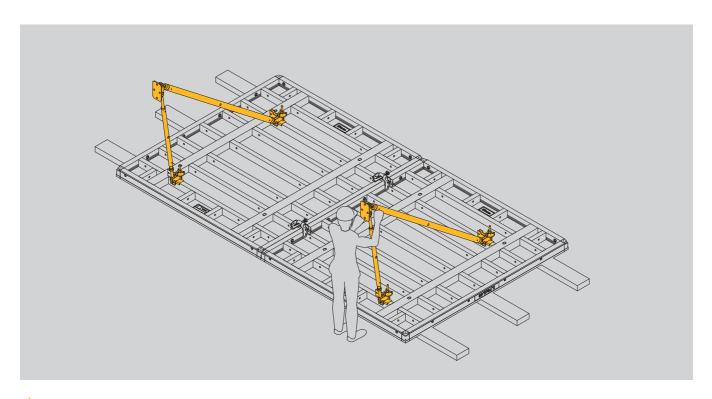


🛕 · Assemble the stabilizing equipment with Push-pull Props, Heads and Push-pull Prop Shoes.

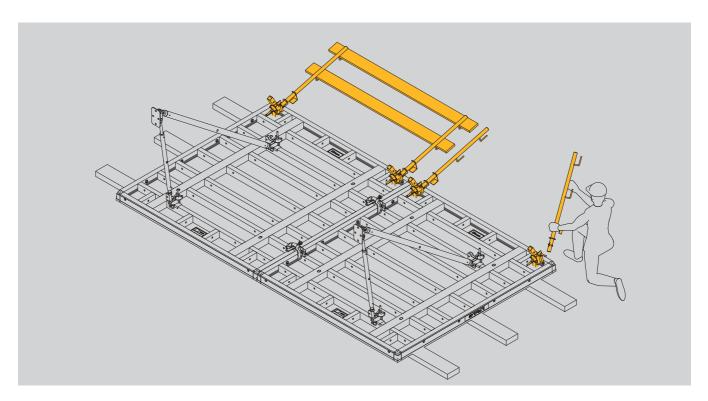


▲ · Install the Handrails over the Panels using the Post Bracket, Safety Handrail Post and the planks or tubes.




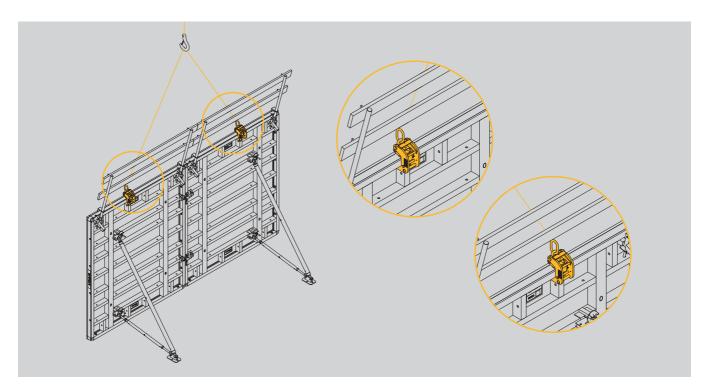


- ▲ · Install the Lifting Hooks.
 - · Lift to the desired final position.
 - · Anchor to the ground.

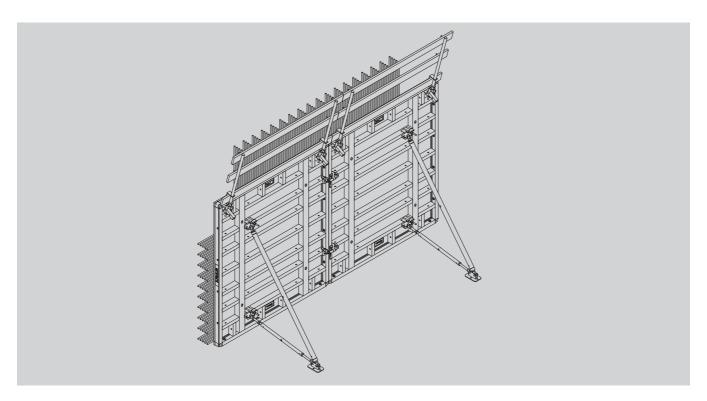

🛕 · Reinforce.

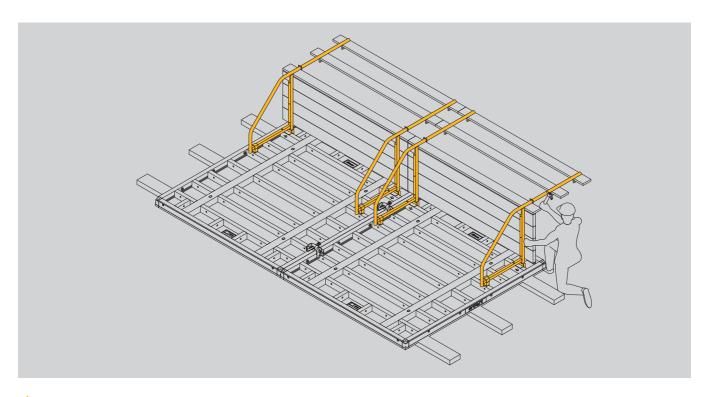


• Repeat the gang assembly process on the opposite side, building the working Platform using Walkways Brackets, handrails and planks.

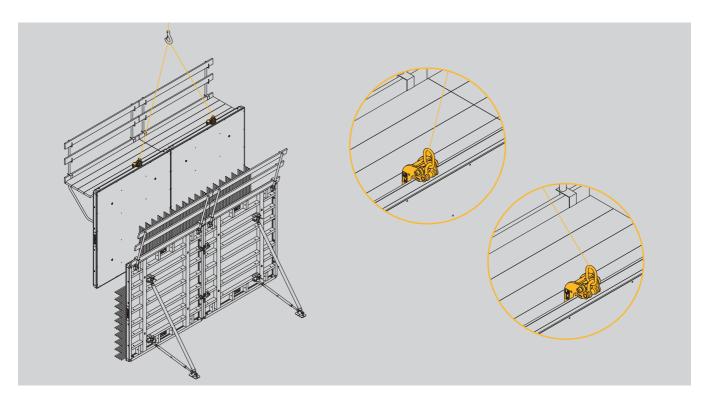

△ · Lift the gang by the Lifting Hooks and position it face to face to the push-pull prop gang.



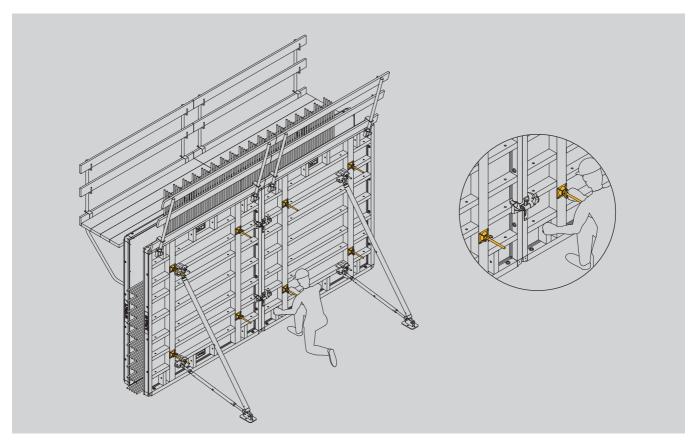

- Insert the Tie Rods and fix them using the Plate Washer Nuts.
 - · Install the lateral Handrails.
 - \cdot Concrete can be poured after the bulkheads have been installed.



Technical solutions

All wall geometries imaginable can be made with this system

grafsystem:


Application software


This software was developed by ULMA Construcción, and it facilitates the design of all construction site solutions that can possibly be solved with any product in the ULMA portfolio. grafsystem obtains, quickly and easily, the assembly drawings and a detailed budget of the materials required for each project.



In short, by simply entering the desired structure geometry, this software provides the best solution for any case.



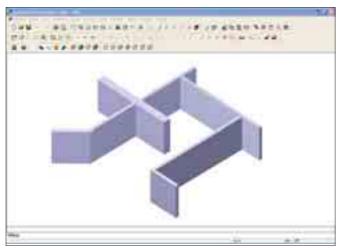

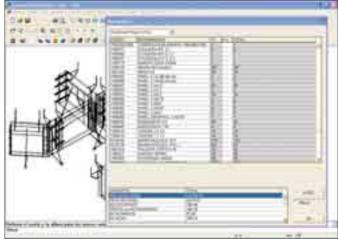

▲ Jobsite geometry

▲ List of materials - budget



▲ Solution - 3D framed wall








▲ The ORMA Modular Formwork system is capable of providing solutions for different geometries encountered when erecting vertical structures

90° Corners

The inside face of 90° corners is framed using the **Inside Corner.**


These corners provide a solution for wall thicknesses between 15cm and 60m, with a standard deviation of 5cm. They also provide solutions for all wall dimensions, whether without compensation or with maximum compensation thickness of only 5cm using Plate Nut Washers so Walers are not required.

- There are various solutions used to frame the outside face of 90° wall corners:
 - Outside Corner
 - Universal Panel
 - Panel in the edge

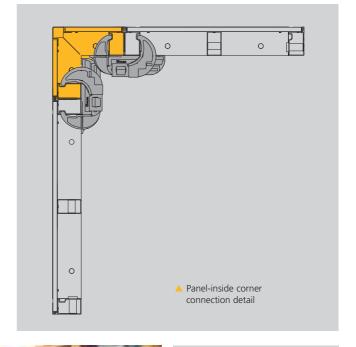






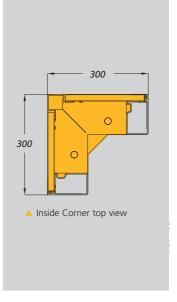

With Outside Corner

The outside face of 90° corners is framed with the **Outside Corner,** joining it to the adjacent Panels with Clamps in both directions.

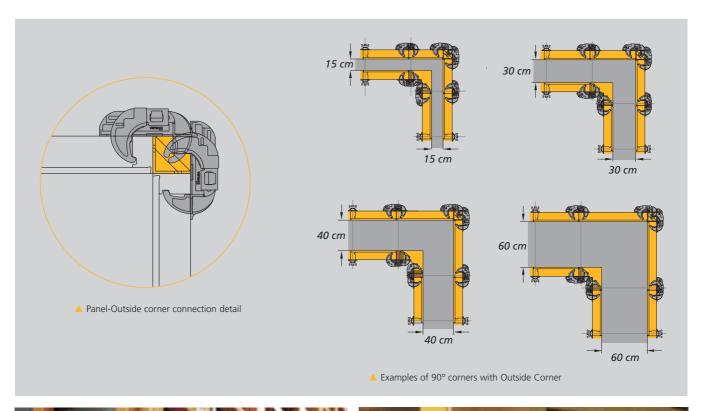








With Universal Panel


Combining the Universal Panel with different wall panels facilitates **obtaining the desired thicknesses in every case.** It also reduces the need to use compensation.

Both the lateral holes of the wall panels and the holes of the Universal Panel's multipunched ribs provide a wide range wall dimensions in increments that are multiples of 5cm.

The joint is tied using the **Universal Panel Bolt and Plate Washer Nut 15.**




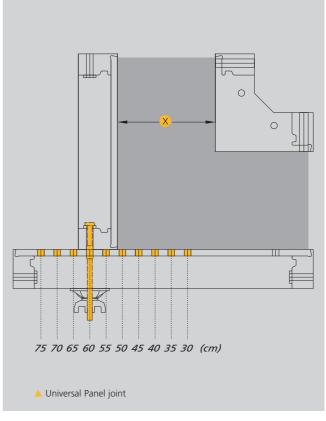

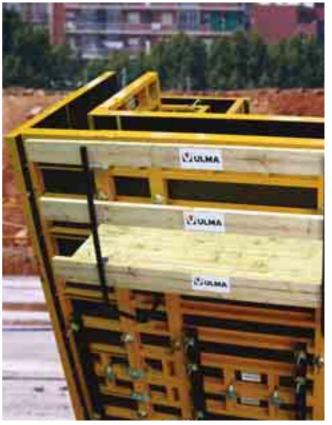


Panel in the edge

This solution consists of placing one panel perpendicular to another exactly in the edge, joining them with Adjustable Clamps.

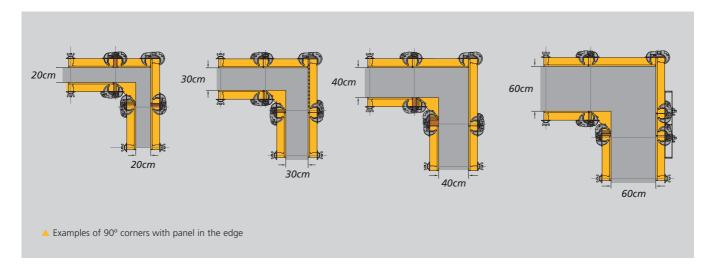



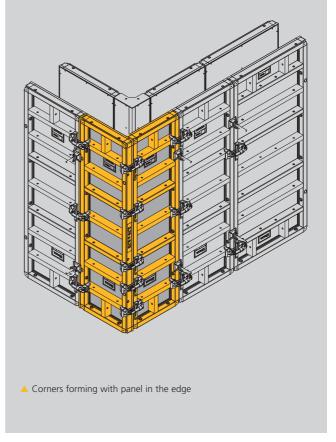



Hinged corners

Vertical formwork systems come with different elements that allow them to be adapted to any type of angle, whether 90° or an angle other than 90°.

To do this, combine outside and inside **Hinged Corners** with panels that are joined laterally with clamps.


The range of angles covered is from 65° to 180°.




▶ Between 65° and 180°:

Combine Outside and Inside Corners.


To obtain the minimum angle of 65°, join the panels and the Inside Hinged Corner with the **Fixed Clamp.**

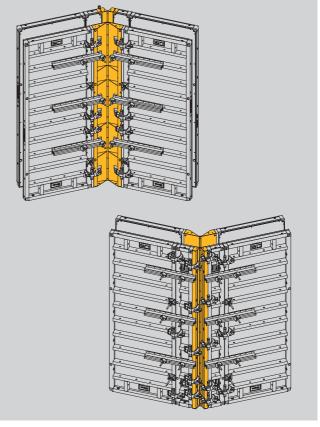

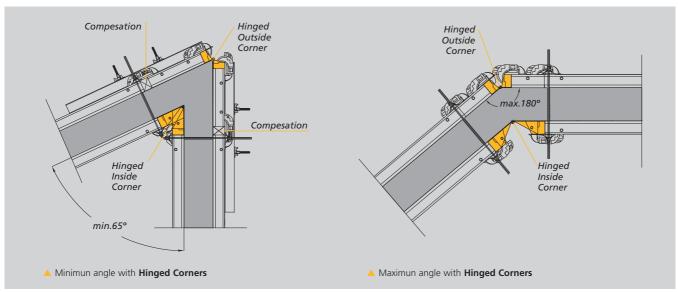

F Between 95° and 180°:

Use the Inside Corner on the inside and outside face.

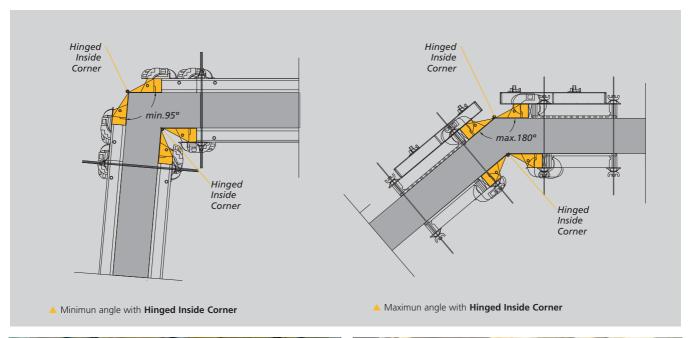












90° Wall intersections

Combining the **Inside Corner** with the different panel widths, it can be solved various wall thicknesses; thus it is possible to greatly reduce the use of compensations.



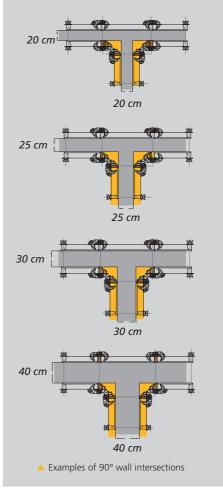






Bulkheads


There are different options for solving bulkheads:

With Universal Panel

Fast and safe solution with no need of infillings.

The **Universal Panel** is fixed to the standard panels using the **Universal Panel Bolt** and the **Plate Washer Nut.**

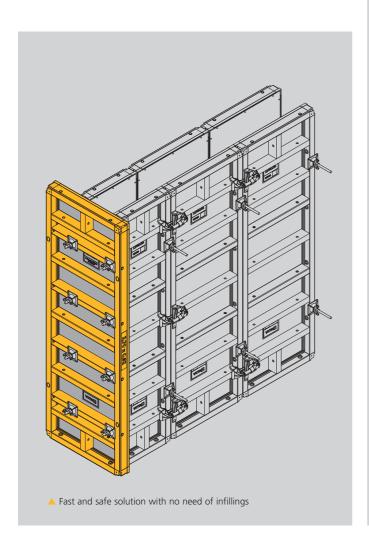

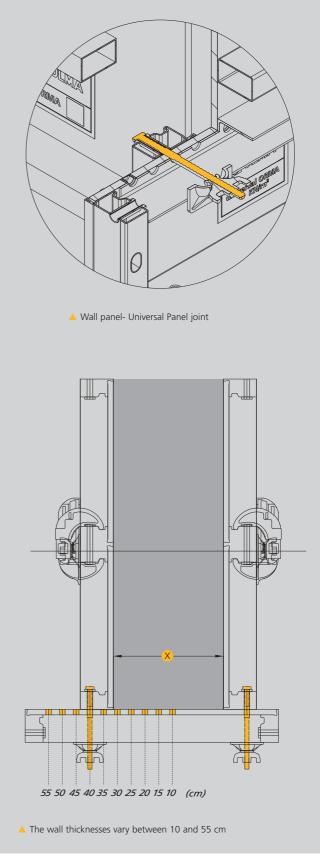



With Waler

The Walers are fixed to the Panels by passing the Universal Panel Bolts through the lateral holes in the profile. The bulkhead plywood is nailed and supported on the Walers.





▲ Fixing the Waler to the Panel using Bulkhead Hooks tied to the profile



▲ Fixing the Waler to the panel using Universal Panel Bolt

Other types of bulkheads:


With panel in the edge




With Outside Corner




Pilasters

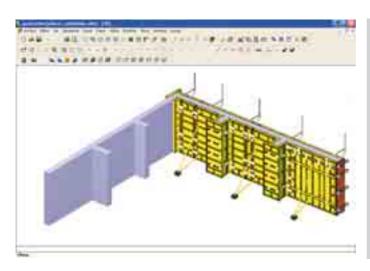


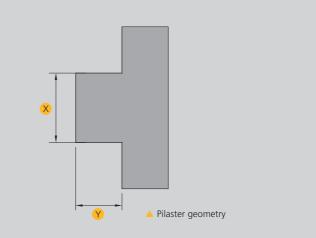

With Universal Panel

■ Inside corner with Universal Panel: y≤=300mm

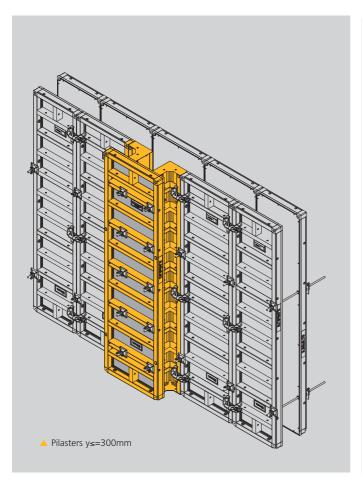

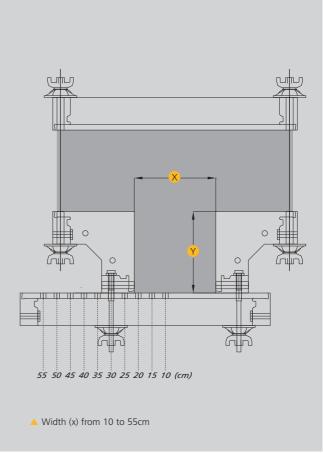




■ Universal Panel with standard Panel: y≥=300mm

The pilaster width (x) should be the same as the panel width and the pilaster length (y) can be from 60cm to 105cm.






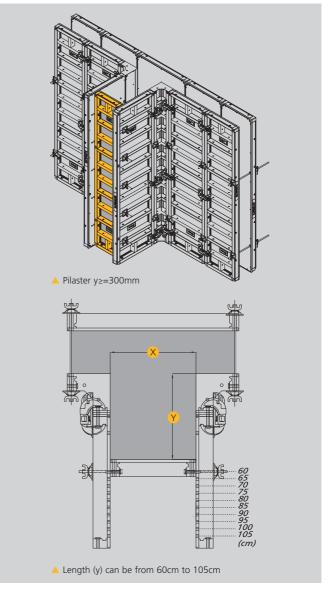

With Waler

It is possible to make any kind of pilaster with this element.



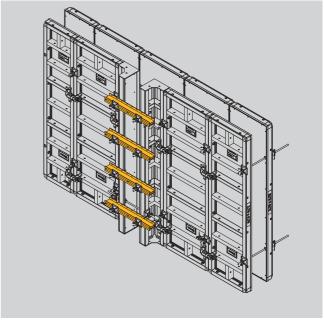

Columns

The Column Panel characteristics and different combinations of these panels provide the desired column dimensions.





- There is a wide range of **Columns Panel** that provides solutions for the following geometries: columns from 30x30cm to 120x120cm with the option to adjust every 5cm.
- The range of heights for this type of panel is as follows: 2.7m; 1.2m; 0.6m.
- The range of **Column Panel** widths follows: 0.72m; 0.92m and 1.32m.
- These support **80kN/m²** of concrete pressure.
- Panels are joined with a Universal Panel Bolt and a Plate Washer Nut 15, using the tie holes spaced every 5cm on the panels.
- At high columns, the panels are vertically joined using the Adjustable Clamp or Clamp and Waler.












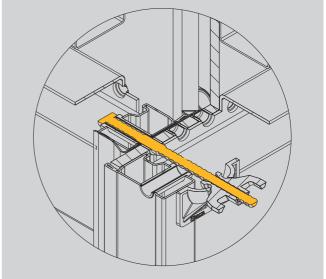

Panel columns can be joined as follows:

Universal Panel Bolt

With this component it is possible to obtain a maximum Column size of 1.15m x 1.15m with a standard deviation of 5cm.






Sharp edges on the columns can be avoided by using **Chamfer strips.**

This is a plastic component that is placed between two panels joined together at 90° angles; it is not necessary to nail it to the plywood because **its special shape allows it to brace the profile.** It also has slotted holes necessary to permit passing the Universal Panel Bolt through the lateral holes of the Column Panel.



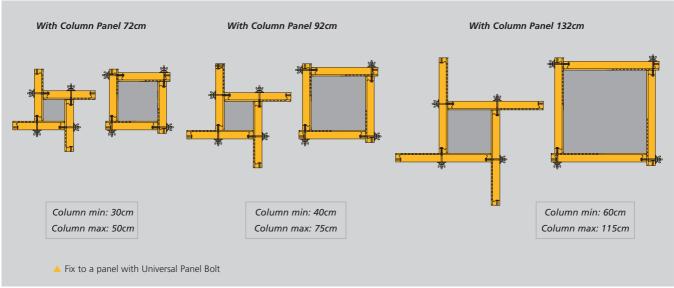


Panel in the edge

This particular solution is possible only for columns with the following dimensions: 60cm x 60cm; 80cm x 80cm and 120cm x 120cm. Panels are joined using the Adjustable Clamp.

Panel in the edge solution using the Adjustable Clamp can be applied only for heights of up to 3.3m.



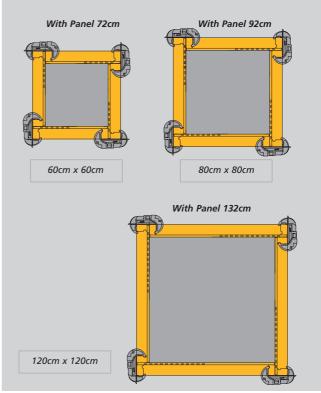




Filler between panels

Fillers up to 10cm:

Due to their size, these permit joining panels with Adjustable Clamps.

■ Tie Rods through compensation + Plate Washer Nut 15
It is also possible to use metal compensation with holes for passing Tie Rods.



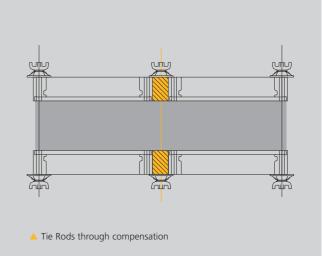


▲ Wood compensation

■ Tie Rods through the panel:


▶ With Waler



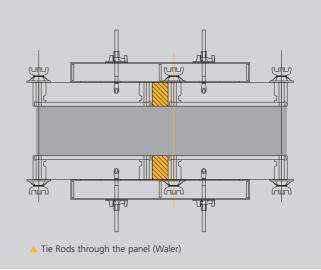

► With Plate Nut 200x150 Solution valid for fillers up to 7cm of compensation.



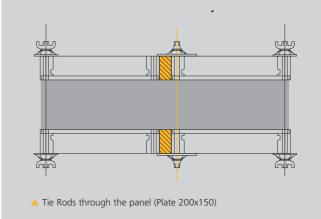


Filler wider than 10cm:

Due to their size, these do not permit joining panels with Adjustable Clamps.


► Compensation plate



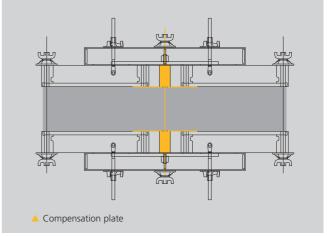

▶ Wooden profile



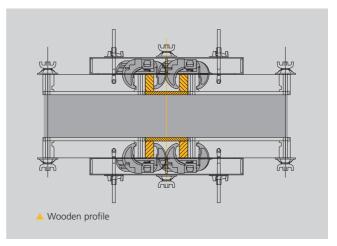




Tanks - Water stop solutions

There are two ways to provide water stop solutions for walls:


Water Stop System 26

Valid for pressures up to the equivalent of a 10m height of water.

System components:

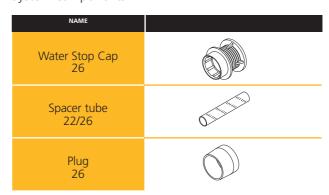

These components are placed on Tie Rods rather than the standard tube and cone.

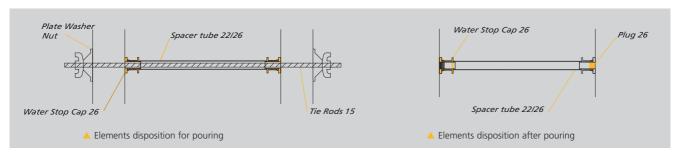


Water Stop System DW15

This component can support a hydrostatic pressure up to the equivalent of a 70m height of water.

System components:



In this case, the **Water Stop DW15** and the **Water Stop Adaptor DW15** are installed in the middle of the wall and are used to connect the Tie Rods and corresponding standard consumable parts on both sides. These components remain in the concrete.

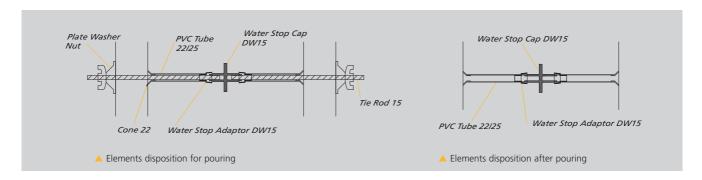

One face formwork

For cases in which it is not possible to place Panels faceto-face, and thus it is impossible to use Tie Rods to support the pressure of the concrete, it is necessary to use exterior structures to support said forces.

ULMA Construcción has two types of one-face formwork depending on the height of the formwork: **Walers UCAB and Trusses EUC.**

- The Walers UCAB provide solutions for walls at a maximum height of 3.6m.
- The Trusses EUC are used for higher elevations, combining them to adjust to the required wall height.

It is quick and easy to anchor the panels to the trusses using heads. However, at the base, the trusses must be anchored to the ground by rods that were previously installed in the sills or foundation. These rods should support the concrete pressure.



▲ Walers UCAB



▲ Trusses EUC








After assembly or installation, these systems, panels and trusses together, can be lifted and moved to be used in different positions or pourings. For safety, when working at high elevations is required, working platforms can be incorporated into these systems.




These one face formwork systems are compatible with other ULMA Construcción vertical formwork systems.

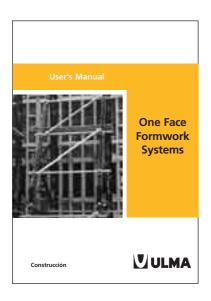

▲ For further information, see the

One Face Formwork Systems User's Manual

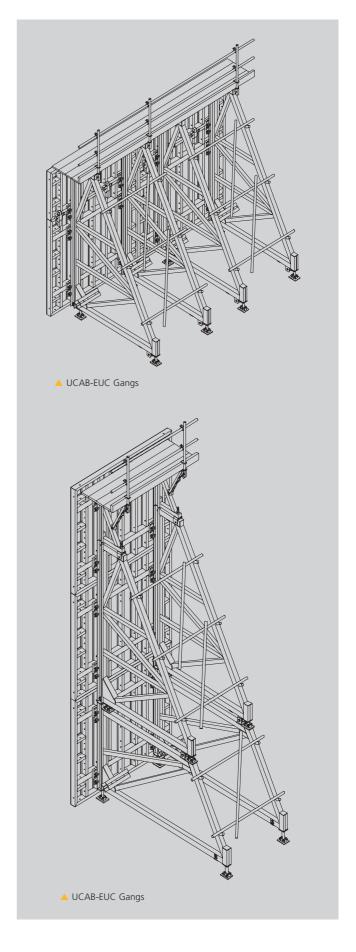

Climbing


Climbing formwork rises vertically by stages to build walls that cannot be completed in a single pouring due to their height. Accordingly, a working platform is built at the required height, and the formwork is supported on it.

The **ORMA Climbing Bracket** supports the platform and the formwork.

ORMA Climbing Brackets are used for walls up to 20m height where maximum pouring height should be 3.9m. If it is necessary to build higher walls, where pouring height is also higher than 3.9m, ULMA Construcción has other climbing systems appropriate for these specific needs.

ORMA Brackets and ORMA Formwork are moved and lifted separetely, connecting the brackets with bracing tubes.



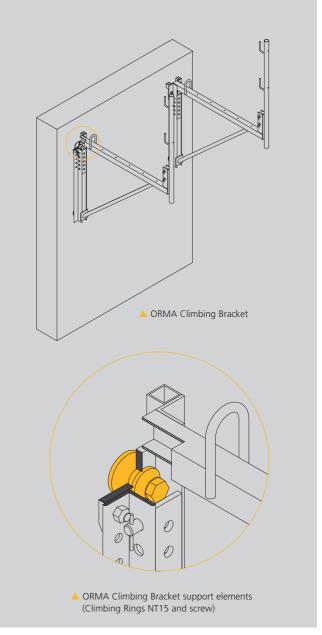





The climbing bracket support on the **Climbing Rings NT15** should be screwed in to **Cones DW15/M24** embedded that remain in the wall since the previous pouring level.

For architectural walls, it is also possible to use a smaller cone: **Cone AWF**, which is assembled and used in the same way as the Cone DW15/M24.

The cone can be assembled without having to perforate the plywood, by placing it in the panel tie hole position. If the geometrical shape to be executed (holes, windows, etc.) requires fixing the cone at a different height, then the plywood can be perforated.

It is possible to climb on either one or two sides of the wall. If climbing on one face, the inside formwork will be supported by the interior slab. If climbing on both sides of the wall, brackets can be used on both sides, or interior platforms can be directly supported on the wall with gravity pawls (inside elevator shafts, stairs, etc.).


If climbing is required for higher walls and also higher pouring heights, other brackets, that allows moving and lifting together brackets and formwork, should be used because this way **assembling time can be considerably reduced.**








▲ Climbing Bracket support system

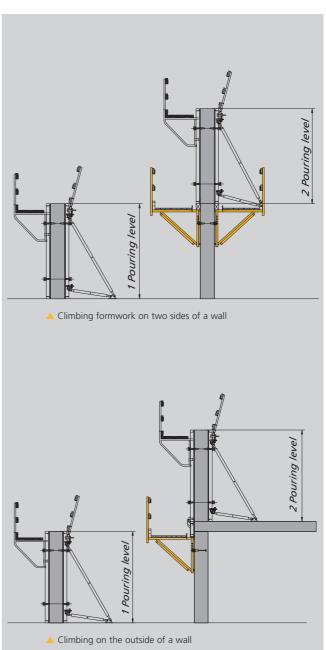

Among ULMA Construcción's **wide range of brackets,** the proper mode can be selected based on the following criteria: platform width, formwork surface, cone recovering platform and roll-back system, etc.



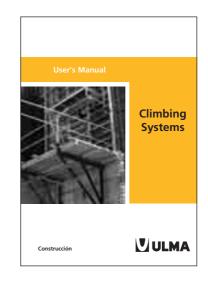

 For further information refer to the Climbing Systems User's Manual.











Foundations



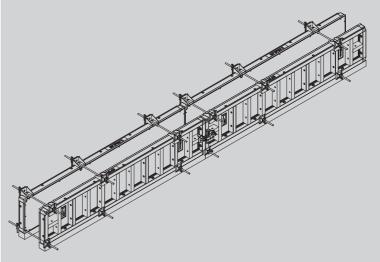

Foundations can be framed tying the panels in a variety of ways.

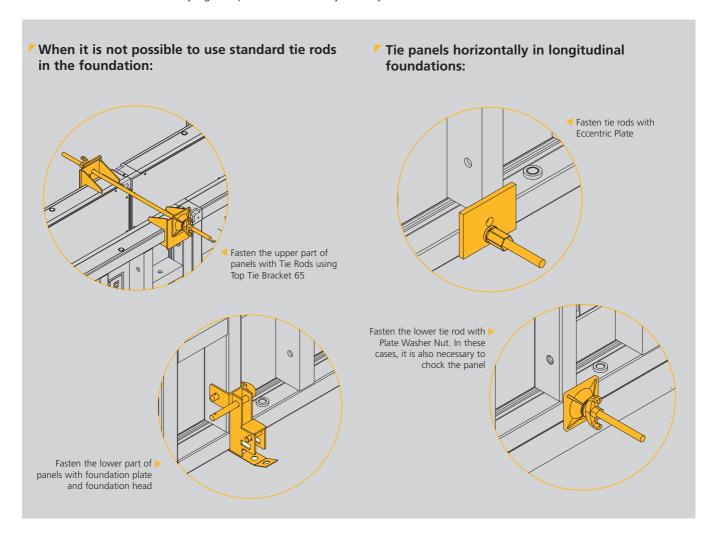

Other solutions

Elevator shafts





Polygonal walls







Inclined walls






Compatibility with BIRA circular formwork for obtaining straight and curved walls





Compatibility with the ENKOFORM V-100 vertical formwork











Large gangs of ORMA panels with Walers DU-100







Handling and repair

An easy to use system

Shipping and handling

Material should be handled and transported with the proper auxiliary equipment, after marking off the work area and stopping the flow of pedestrian traffic in the area.

Transport small elements in crates or boxes to avoid losing them.



Stacking

Stack the plywood panels in such a way as to avoid damaging them.

Place the panels on top of frames in order to maintain order, cleanliness and distribution. At this point, store the panel packets, alternating a block between them after use.



Lifting

Individual panels or gangs of panels always have to be lifted using ORMA Lifting Hook. It is recommended to use two hooks with the proper fixing to the panel.



Assembly

Assemble the panels horizontally after placing planks or wood sills on the ground.

Before pouring, steep the plywood surface with release agent.



Once materials have been stripped, clean the panels and store them properly.

Maintenance

Different components have to be cleaned and scraped on the jobsite as soon as they have been stripped. Before any pouring, steep the plywood with release agent as previously explained.

Repairing

ULMA Construcción has specific equipments for cleaning, repairing panels and replacing plywood.












Components and accessories


Main panels


	WEIGHT (kg)	ITEM NO.
Range 3.30		
Panel 3.3x2,4 (7.92m²)	450	1908247
Panel 3.3x1.2 (3.96m ²)	208	1908250
Panel 3.3x0.9 (2.97m ²)	167	1908253
Panel 3.3x0.75 (2.47m ²)	148	1908256
Panel 3.3x0.6 (1.98m ²)	130	1908259
Panel 3.3x0.45 (1.48m ²)	107	1908262
Panel 3.3x0.3 (0.99m ²)	88	1908265

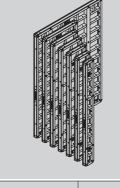

Range 2.70


Panel 2.7x2.4 (6.48m²)
Panel 2.7x1.2 (3.24m ²)
Panel 2.7x0.9 (2.43m ²)
Panel 2.7x0.75 (2.03m ²)
Panel 2.7x0.6 (1.62m ²)
Panel 2.7x0.45 (1.21m ²)
Panel 2.7x0.3 (0.81m ²)





Range 1.20

Panel	1.2x1.2 (1.44m ²)
Panel	1.2x0.9 (1.08m ²)
Panel	1.2x0.75 (0.9m ²)
Panel	1.2x0.6 (0.72m ²)
Panel	1.2x0.45 (0.54m ²
Panel	1 2x0 3 (0 36m ²)

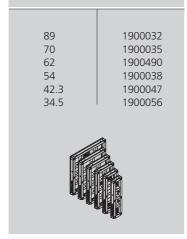

Universal Panel
Universal Panel 3.3x0.92 (3.03m ²)
Universal Panel 2.7x0.92 (2.48m²)
Universal Panel 1.2x0.92 (1.1m²)

154 79	1908372 1908381

ITEM NO.


WEIGHT (kg)

43.3

Column Panel

Column Panel 2.7x0.92 (2.48m²) Column Panel 2.7x0.72 (1.94m²)	
Column Panel 1.2x1.32 (1.58m²) Column Panel 1.2x0.92 (1.1m²) Column Panel 1.2x0.72 (0.86m²)	
Column Panel 0.6x1.32 (0.79m²) Column Panel 0.6x0.92 (0.55m²) Column Panel 0.6x0.72 (0.43m²)	

Column Panel 2.7x1.32 (3.56m²)

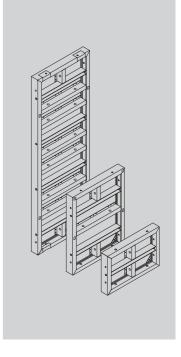

ranei	1.2X1.2 (1.44III-)
Panel	1.2x0.9 (1.08m ²)
Panel	1.2x0.75 (0.9m ²)
Panel	1.2x0.6 (0.72m ²)
Panel	1.2x0.45 (0.54m ²)
Panel	1.2x0.3 (0.36m ²)



WEIGHT (kg)

145

118

55

ITEM NO.

1908346

1900096


1900164


1908357

Corners

Inside Corners
Inside Corners 3.3 (1.98m ²)
Inside Corners 2.7 (1.62m²)
Inside Corners 1.2 (0.72m ²)


WEIGHT (kg)	ITEM NO.
124	1908271
100	1900089
48.7	1900156

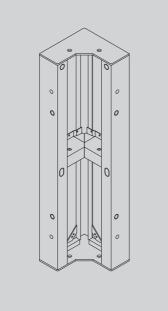

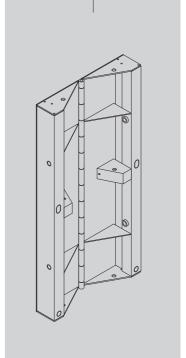


Outside Corners

Outside Corners 3.3 Outside Corners 2.7 Outside Corners 1.2

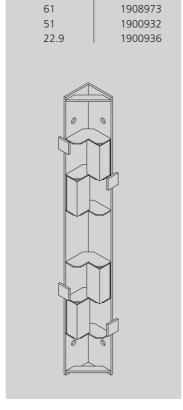

Outside Hinged Corners

Outside Hinged Corners 3.3 (0.33m²) Outside Hinged Corners 2.7 (0.27m²) Outside Hinged Corners 1.2 (0.12m²)

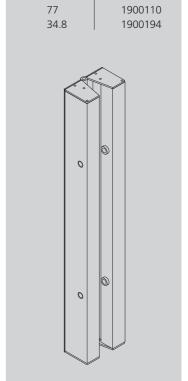

93



WEIGHT (kg)

ITEM NO

Compensations

Compensation Tube Compensation Tube 3.3 (0.16m²) Compensation Tube 2.7 (0.14m²) Compensation Tube 1.2 (0.06m²)

1908460 1900216 1900217

49.2

39.8

1908483

1900423

Compensation Plate

Compensation Plate 3.3 (0.99m²) Compensation Plate 2.7 (0.81m²) Compensation Plate 1.2 (0.36m²)



Wooden Profile
Wooden Profile 3.3
Wooden Profile 2.7
Wooden Profile 1.2

11.4 10.8 5.3	1908505 1900439 1900440

6.6

4.4


WEIGHT (kg)

ITEM NO.

Wooden Compensation

Wooden Compensation 3.3x0.05 Wooden Compensation 3.3x0.03 Wooden Compensation 2.7x0.05 Wooden Compensation 2.7x0.03 Wooden Compensation 2.7x0.03

Beveled Wood ((Half piece 1900444)

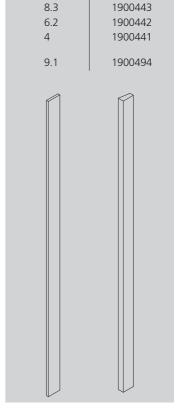

1908508

1908507


1908506

Tying Elements –			Push-pull props - 9		
Lifting Hook	WEIGHT (kg) 10.6	1900179	Head 60	WEIGHT (kg) 4.5	1900119
Fixed Clamp	2.9	1900894	Push-pull prop shoe	4.3	1900144
Adjustable Clamp	5.5	1900170	Push-pull prop Push-pull prop 1.1-1.7 Push-pull prop 2.4-3.5 Push-pull prop 3.6-4.8 Push-pull prop 5-6	7.8 24.2 43.3 51	1900134 1900123 1908168 1900147
Gang	MEIGHT (L.)	ITEM NO.			
Waler Waler 0.9 Waler 1.55	10.9 18.6	1900193 1900445	Push-pull prop 6-10	99	1900207
	4		Push-pull prop head 6-10	4.6	1902219
L Waler	24.6	1900538			
Waler Hook	1.4	1900448	Push-pull prop pallet	61.5	1900411
Talei Hook					



Work Platforms - Safety

Work Platforms -		
	WEIGHT (kg)	ITEM NO.
Post Bracket	3.5	1900941
		>
	0	\
	U)
Safety Handrail Post S-V	3.9	1860516
		_
		1
		1
		<u> </u>
		P
Handrail Post	3.4	1902210
		9
	A	
		2
	ñ	
	7	

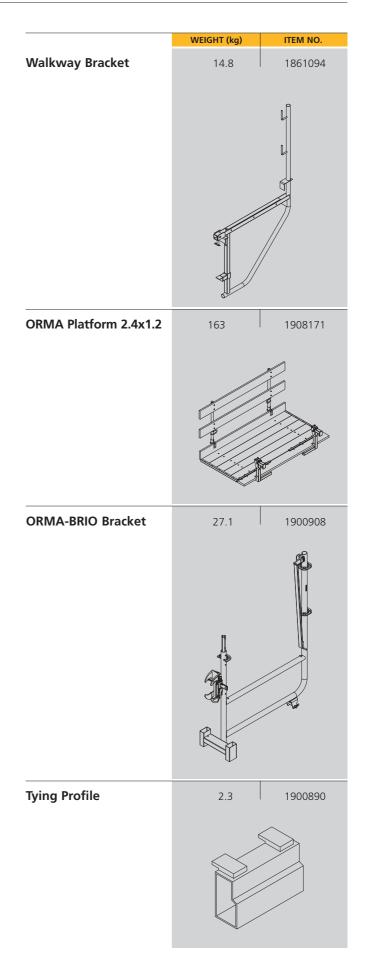

	WEIGHT (kg)	ITEM NO.
atform		
tform 3	22.2	2127713
tform 2.5	20.2	2127714
tform 2	17	2127715
form 1.5	12.4	2127716
tform 1.02	9	2127717
form 0.7	6.6	2127718
pdoor platform door platform 3	31	2127712
door platform 3 door platform 2.5	25.8	2127712
door platform 2	18.6	2127867
door platform 1.5	13.5	2128152
door platform 1.02	7.9	2129617
ger		
er 3	11.6	2127527
er 2.5	9.4	2127526
er 2	7.6	2127525
er 1.5	6	2127524
er 1.02	4.4	2127523
er 0.7	3.2	2127522
		1

	WEIGHT (kg)	ITEM NO.
Standard 0.5 w/Socket	2.2	2127958
	Months (
Toeboard Toeboard 3 Toeboard 2.5 Toeboard 2 Toeboard 1.5 Toeboard 1.02 Toeboard 0.7	6.8 6 5.2 4.2 3.2 2.6	2124997 2124996 2124995 2124994 2124999 2124998
	Ho Ho	
Extensible Platform Extensible Platform 2-2.5 Extensible Platform 1.5-2.35 Extensible Platform 1-1.5	20.5 17.3 12.5	2067043 2067048 2067035
Telescopic ladder Supplement	12.2	1908363



Climbing **Anchors** WEIGHT (kg) ITEM NO. **ORMA Climbing Bracket** 1900386 Cone DW 15/M24 1901080 **Climbing Ring NT 15** 1901083 0.8 **Cone-Waler Connector** 1.95 1901245 Hexagonal screw M24x120 DIN931-10.9 9053013 Lost Tie 15/0.25 1900738

	WEIGHT (kg)	ITEM NO.
Tie Rod		
	1 4	0220100
Tie Rod 15/1	1.4	0230100
Tie Rod 15/1.2	2	0230120
Tie Rod 15/1.5	2.5	0230150
Tie Rod 15/2	3.3	0230200
Tie Rod 15/6	10	0230600
Tie Rod 20/1	2.9	0234100
Tie Rod 20/1.2	3.4	0234120
Tie Rod 20/1.5	4.3	0234150
Tie Rod 20/2	5.2	0234200
Tie Rod 20/6	17.2	0234600
	Of the second	
Bulkhead Hook	0.91	1900227
	# [
Pin		
Pin 0.35	0.6	1861033
Pin 0.55	0.8	1861034
		-Juc
Panel Bolt	0.39	1861122
	0.55	1001122
		Millian
Eccentric Plate	1.4	1861692
		\wedge
		//
	\	
	Ť	

	WEIGHT (kg)	ITEM NO.		WEIGHT (kg)	ITEM NO.
Universal Panel Bolt	0.6	1900265	Wing Nut 20	0.37	1905046
Top Tie Bracket 65	1.8	1900929	Base Plate D20	2.2	1905047
Plate Washer Nut 15	1.2	1900256	Plate Nut D15 200x15	2.6	1908158
Hexagonal Nut 15	0.22	7238001	Foundation Head	3.4	1908229
Plate Washer Nut 20	1.2	1905160	Foundation Plate 25	16.6	1850453



Consumabile parts

Consumabile parts				
	WEIGHT (kg)	ITEM NO.		
Chamfer Strip- 3,3m (16 units)	0.51	1908535		
5,5 (10 amo)				
Spacer Tube				
Spacer Tube 22/25 (75ml) (for 15 Tie Rod)	0.3	7230455		
Spacer Tube 22/26 (100ml)	0.4	7238047		
(for 15 Tie Rod with	0.4	7230047		
Water Stop Cap) Spacer Tube 26/29 (50ml)	0.25	1905814		
Spacer Tube 26/29 (50ml) (for Fix Anchor DW15)	0.23	1505014		
Spacer Tube 32/36 (50ml) (for 20 Tie Rod/	0.3	9371968		
Fix Anchor DW15)				
		(n, "")		
	/11/	/		
		/		
Cone	0.006	7220264		
Cone 22 (250 units) Cone 26 (250 units)	0.006 0.007	7230264 7238048		
Cone 32 (250 units)	0.03	9371967		
		<i>y</i> /		
Plug				
Plug 20 (250 units)	0.003	1861799		
(for ORMA, Versat, Comain, LGR Columns)				
Plug 22 (250 units)	0.003	1900159		
Plug 25/30 (250 units) (for ORMA Panels)	0.003	1900213		
Water stop Plug 26 (250 units)	0.004	7238050		
Plug 30 (250 units)	0.004	7238046		

	WEIGHT (kg)	ITEM NO.
Water Stop Cap 26 (250 units)	0.009	7238049
Water Stop DW15	0.61	0230004
Water Stop Adapter DW15	0.1	9371966
Lateral Plastic Sleeve	0.008	1908298

Our products

Vertical Formworks



ORMA Modular Formwork A system for large works and high performance



Circular Sheet
Formwork BIRA
Formwork system designed for circular wall configurations



ENKOFORM V-100
Bracing System
Wall and Column Formwork
with Steel Walers and Timber
Beams



LGR Column FormworkColumn formwork using light panels



FormworkModular Formwork that is light and easy to handle by a single person

COMAIN Hand-held



CLR Circular Column Formwork Circular column formwork, designed to solve the different column diameters easily



NEVI Modular Formwork Vertical handset and gang formwork system



Formwork Climbing SystemsClimbing and self-climbing systems for any height





ULMA Worldwide

EUROPE

Germany ULMA Betonschalungen und Gerüste GmbH

Paul-Ehrlich-Straße 8 D-63322 RÖDERMARK Phone: + 49 6074 9294 0 Fax: + 49 6074 9294 101 www.ulma-c.de

Nordwest Branch

Stresemannallee 4c D-41460 NEUSS Phone: + 49 2131 40201 0 Fax: + 49 2131 40201 99

Südwest Branch

Manfred - Wörner - Str. 115 D-73037 GÖPPINGEN Phone: + 49 7161 50608 42 Fax: + 49 7161 50608 43

France ULMA, S.A.R.L.

27, Rue Gustave Eiffel Z.I. de la Marinière 91070 BONDOUFLE Phone: + 33 1 69 11 54 50 Fax: + 33 1 69 11 54 54 www.ulma-c.fr

IDF Branch

22 Bis, Rue Gustave Eiffel Z.I. de la Marinière 91070 BONDOUFLE Phone: + 33 1 69 11 63 30 Fax: + 33 1 69 11 63 31

Eguilles Branch

50, Allée Meulière Z.I. - Route de Berre 13510 EGUILLES Phone: + 33 4 42 64 62 30 Fax: + 33 4 42 64 62 31

Nantes Branch

11, Rue Fondeur Z.I. du Tisserand 44800 SAINT HERBLAIN Phone: + 33 2 51 80 48 04 Fax: + 33 2 51 80 48 05

Lille Branch

Zone Industrielle Rue André Ampère 59930 LA CHAPELLE D'ARMENTIÈRES Phone: + 33 3 20 07 11 86 Fax: + 33 3 20 07 11 68

Lescar Branch

Chemin des Trois Ponts 64230 LESCAR Phone: + 33 5 59 77 63 81 Fax: + 33 5 59 77 87 30

Evénements Branch

9, Avenue Larregain Z.I. de Monhauba 64140 LONS Phone: + 33 5 59 62 71 97 Fax: + 33 5 59 13 84 33

Tarnos Branch

35, Rue de l'Industrie Z.I. de Tarnos 40220 TARNOS Phone: + 33 5 59 64 44 45 Fax: + 33 5 59 64 44 84

Italy ALPI, S.P.A.

Zona Industriale Est I-39035 MONGUELFO (BZ) Phone: + 39 0474 947 400 Fax: + 39 0474 947 499 www.alpionline.net

KazakhstanULMA Kazakhstan

01000 ASTANA 25, Tashenova St. 4th floor, offices 7,9 Phone:/Fax: + 7 7172 58 05 19 Phone: + 7 7172 37 93 48 www.ulma-c.kz

Poland ULMA Construccion Polska S.A.

03-115 WARSAW ul. Klasyków 10 Phone: + 48 22 506 70 00 Fax: + 48 22 814 31 31 www.ulma-c.pl

WSCHÓD REGION WARSZAWA Branch

Warszawa Office 03-197 WARSAW

ul. Laurowa 39 Phone: + 48 22 506 72 50 Fax: + 48 22 747 19 16

Olsztyn Office

Phone: + 48 504 212 467

LUBLIN Branch

Lublin Office 20-327 LUBLIN ul. Wrońska 2 Phone: + 48 81 749 72 90 Fax: + 48 81 744 04 90

Białystok Office

Phone: + 48 504 212 633





ZACHÓD REGION POZNAŃ Office

61-317 POZNAŃ ul. Ostrowska 484 Phone: + 48 61 838 75 30 Fax: + 48 61 863 01 60

Bydgoszcz Office

85-739 BYDGOSZCZ ul. Fordońska 199 Phone: + 48 52 323 76 80 Fax: + 48 52 345 25 65

GDAŃSK Branch

Gdańsk Office

80-298 GDAŃSK ul. Budowlanych 27 Phone: + 48 58 522 78 00 Fax: + 48 58 667 02 04

Szczecin Office

70-676 SZCZECIN ul. Gerarda Merkatora 7 Phone: + 48 91 485 77 30 Fax: + 48 91 462 53 11

WROCŁAW Branch

Wrocław Office

50-541 WROCŁAW ul. Armii Krajowej 53 Phone: + 48 71 391 76 30 Fax: + 48 71 367 30 90

Nowa Sól Office

67-100 NOWA SÓL ul. Kościuszki 29 Phone: + 48 68 376 77 60 Fax: + 48 68 387 02 21 wew. 357

POŁUDNIE REGION

JAWORZNO Branch

43-603 JAWORZNO ul. Wysoki Brzeg 25 Phone: + 48 32 615 73 70 Fax: + 48 32 353 33 91

ŁÓDŹ Branch

92-318 ŁÓDŹ al. Piłsudskiego 135 Phone: + 48 42 666 73 20 Fax: + 48 42 650 03 25

Portugal ULMA Portugal Lda.

Zona Industrial - Rua A, s/n Vale de Figueira 2695 SÃO JOÃO DA TALHA - LISBON Phone: + 351 219 947 850 Fax: + 351 219 558 022 www.ulma-c.pt

Porto Branch

Zona Industrial da Feiteira Rua das Casas Queimadas 717 Grijó 4415-439 VILA NOVA DE GAIA PORTO

Phone: + 351 227 418 820 Fax: + 351 227 418 829

Czech Republic ULMA Construcción CZ, s.r.o.

Průmyslová 1009 294 71 BENÁTKY NAD JIZEROU Phone: + 420 326 910 600 Fax: + 420 326 910 601 www.ulma-c.com

Slovac Republic ULMA Construccion SK, s.r.o.

Rybničná 38/K 831 06 BRATISLAVA Phone: + 421 2 4910 2911 - 13, 18 Fax: + 421 2 4910 2922 www.ulma-c.com

Romania ULMA Cofraje s.r.l.

Sos Chitilei, 200 012405 - Sector 1 - BUCHAREST Phone: + 40 31 425 13 22 / 23 Fax: + 40 31 425 13 24 www.ulma-c.ro

Ukraine ULMA Formwork Ukraine Ltd.

01013 KIEV 3, Derevoobrobna St. Phone: + 380 44 255 14 92 Fax: + 380 44 255 14 94 www.ulma-c.com





ULMA Worldwide

AMERICA

Argentina ULMA Andamios y Encofrados Argentina, S.A. Bernardo de Irigoyen 722 6A CP1072AAP CAPITAL FEDERAL Phone/Fax: + 541 14 3425132 www.ulma-c.com.ar

Brazil ULMA Brasil - Fôrmas e Escoramentos Ltda.

Rua João Dias Ribeiro, 210 Jd. Sagrado Coração de Jesus Itapevi - SP CEP: 06693-810 Phone/Fax: + 55 11 3883 1300 www.ulma-c.com.br

Rio de Janeiro Branch

Rua Sargento Silva Nunes, 137 Ramos - Río de Janeiro - RJ CEP: 21040-231 Phone/Fax: + 55 21 2560 2757 Phone/Fax: + 55 21 2560 5541

Centro-Oeste Branch

Quadra 3, Lotes 680/700 Setor Industrial Leste Gama - Brasilia DF CEP: 72445-030 Phone/Fax: + 55 61 3556 6226

Salvador Branch

Travessa Dois de Fevereiro, 145 Centro - Lauro de Freitas - BA CEP: 42700-000 Phone/Fax: + 55 71 3288 2003

Sul Branch

Rua Dr. João Inácio, 195/199 Navegantes - Poa RS CEP: 90230-180 Phone/Fax: + 55 51 3337 1003

ULMA Construction Systems Canada Inc.

44 Simpson Road Bolton, ONTARIO L7E 1Y4 Phone: + 1 905 857 8562 Fax: + 1 905 857 8564 www.ulma-c.ca

Chile ULMA Chile - Andamios y Moldajes, S.A.

Vizcaya nº 325 - Pudahuel (Ruta 68, Camino Noviciado) SANTIAGO Phone: + 56 2 5990530 Fax: + 56 2 5990535 www.ulma-c.cl

Norte Branch

General Borgoña 934 of. 70 ANTOFAGASTA Phone: + 56 5 5246770 Fax: + 56 5 5246960

Sur Branch

O'Higgins 940 of. 904 CONCEPCIÓN Phone: + 56 4 12522930 Fax: + 56 4 12228321

USA ULMA Form Works, Inc.

58 Fifth Avenue Hawthorne - NEW JERSEY 07506 Phone: + 1 973 636 2040 Fax: + 1 973 636 2045 www.ulma-c.us

West Branch (Phoenix)

1530 West Houston Avenue Gilbert, ARIZONA 85233 Phone: + 1 480 304 4942 Fax: + 1 480 304 4948

Mid-Atlantic Branch (Baltimore)

8235 Patuxent Range Road Jessup, MARYLAND 20794 Phone: + 1 443 296 9852 Fax: + 1 443 296 9860

Mexico ULMA Cimbras y Andamios de México S.A. de C.V.

Vía Gustavo Baz Prada 2160 Acceso 5 54060 Col. La Loma TLALNEPANTLA (Mexico State) Phone: + 52 55 5361 6783 Fax: + 52 55 2628 3549 www.ulma-c.com.mx

Peru ULMA Encofrados Perú, S.A.

Av. Argentina 2882 LIMA Phone: + 51 1 613 6700 Fax: + 51 1 613 6710 www.ulma-c.com.pe

Norte Branch

Ctra. Pomalca, km 2,7 Chiclayo - LAMBAYEQUE Phone: + 51 7 460 8181 Fax: + 51 7 460 8182

ASIA-AFRICA

P.R. China ULMA Formworks China R.O.

#1009 Fortunegate Mall 1701 West Beijing Road SHANGHAI, 200040 Phone: + 86 21 62887070 Fax: + 86 21 62885980 www.ulma-c.com

ULMA Formworks UAE L.L.C.

Plot No. 597- 547 Dubai investments Park P.O. Box. 282286 DUBAI Phone: + 971 4 8858208 Fax: + 971 4 8858209 www.ulma-c.com


India ULMA FORMWORK SYSTEMS INDIA PVT. LTD.

207, 2nd Floor - Time Tower Main M.G. Road - Sector - 28 GURGAON PIN: 122001 Haryana Phone/Fax: + 91 124 4205521 www.ulma-c.in

Singapore ULMA Formwork Singapore PTE. LTD.

2 Senoko Way 758027 SINGAPORE Phone: + 65 6758 2338 Fax: + 65 6758 8523 www.ulma-c.com



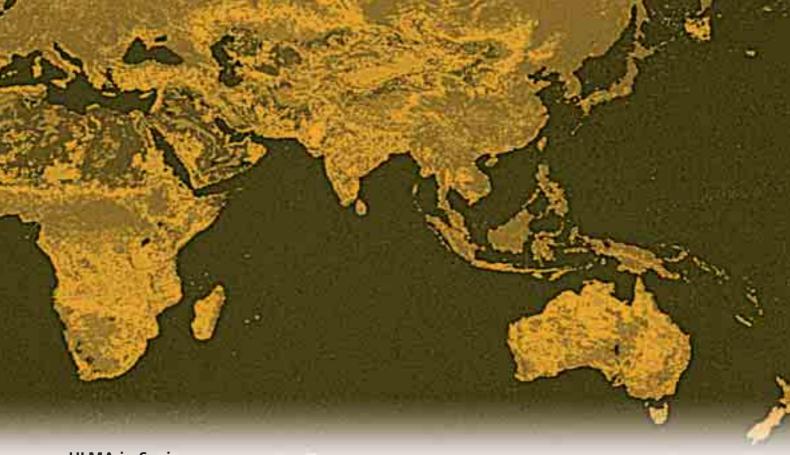

ULMA in Spain

ANDALUCÍA Branch

Pol. Ind. Fridex Autovía Sevilla - Málaga, km 4,2 41500 ALCALÁ DE GUADAIRA (Sevilla) Phone: + 34 95 5630044 Fax: + 34 95 5630020

Camino Nuevo, s/n 18210 PELIGROS (Granada) Phone: + 34 958 405028 Fax: + 34 958 405328

ARAGÓN Branch

Pol. Ind. El Pradillo II Aneto, 2 - Parcela 23 50690 PEDROLA (Zaragoza) Phone: + 34 976 654645 Fax: + 34 976 654635

CANARIAS Branch

Pol. Ind. Las Majoreras Los Llanillos, 33 35259 INGENIO (Las Palmas) Phone: + 34 928 789212 Fax: + 34 928 789538

Pol. Ind. Valle de Güimar Manzana XIII - Parcelas 21 y 22 38509 GÜIMAR (Tenerife) Phone: + 34 922 505020 Fax: + 34 922 501101

CASTILLA Branch

Ctra. Burgos - Portugal, km 116 47270 CIGALES (Valladolid) Phone: + 34 983 581009 Fax: + 34 983 581021

Pol. Ind. de Roces, 5 Gustavo Eiffel, 46 33211 GIJÓN (Asturias) Phone: + 34 98 5168038 Fax: + 34 98 5167513

CATALUÑA Branch

Pol. Ind. Sud - Est Pintor Velázquez, 7 y 9 08213 POLINYA (Barcelona) Phone: + 34 93 7132727 Fax: + 34 93 7133643

Pol. Ind. Son Noguera Cas Rossos, 12-14 07620 LLUCMAJOR (Illes Balears) Phone: + 34 971 669850 Fax: + 34 971 121512

CENTRO Branch

Pol. Ind. Sur 28863 COBEÑA (Madrid) Phone: + 34 91 6523199 Fax: + 34 91 6528828

Ctra. N-401 Madrid-C. Real, km 87 45110 AJOFRÍN (Toledo) Phone: + 34 925 011000 Fax: + 34 925 011008

GALICIA Branch

Pol. Ind. Espíritu Santo Rua Bell, 24-26 15650 CAMBRE (La Coruña) Phone: + 34 981 649802 Fax: + 34 981 649060

Generoso Domínguez, s/n Portela - Tameiga 36416 MOS (Pontevedra) Phone: + 34 986 344045 Fax: + 34 986 304809

NORTE Branch

Pol. Ind. Goiain Av. San Blas, 1 01170 LEGUTIANO (Álava) Phone: + 34 945 001110 Fax: + 34 945 001111

Iturritxualde, 3 48160 DERIO (Vizcaya) Phone: + 34 94 4521425 Fax: + 34 94 4522468

LEVANTE Branch

Pol. Ind. Los Vientos Gregal, 7 - Apdo. 76 46119 NÁQUERA (Valencia) Phone: + 34 96 1399130 Fax: + 34 96 1399096

Pol. Ind. La Serreta Calí, s/n 30500 MOLINA DE SEGURA (Murcia) Phone: + 34 968 642679 Fax: + 34 968 641276



ORMA MODULAR FORMWORK

Notes		









ULMA C y E, S. Coop.

Ps. Otadui, 3 - P.O.Box 13 20560 OÑATI (Guipúzcoa) SPAIN Phone: + 34 943 034900 Fax: + 34 943 034920

www.ulma-c.com